


7" SQUARE PORCH COLUMN (PILLAR) INSTALLATION GUIDE

COLUMN COMPONENTS

(Internal support and fasteners are not included)

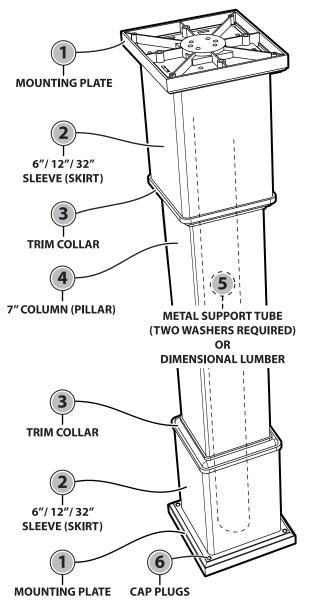


Alpa Ontario Railing Inc. 101 Glidden Road, Brampton, Ontario L6T 3W6 Tel: (905) 796-6631 Fax: (905) 796-8790

IMPORTANT REVIEW ALL **INSTRUCTIONS BEFORE** ASSEMBLING COLUMN

NON-LOAD BEARING INSTALLATION **LOAD BEARING INSTALLATION**

For non-load bearing applications column may be used without an internal support.

For load bearing applications an internal support MUST be used.

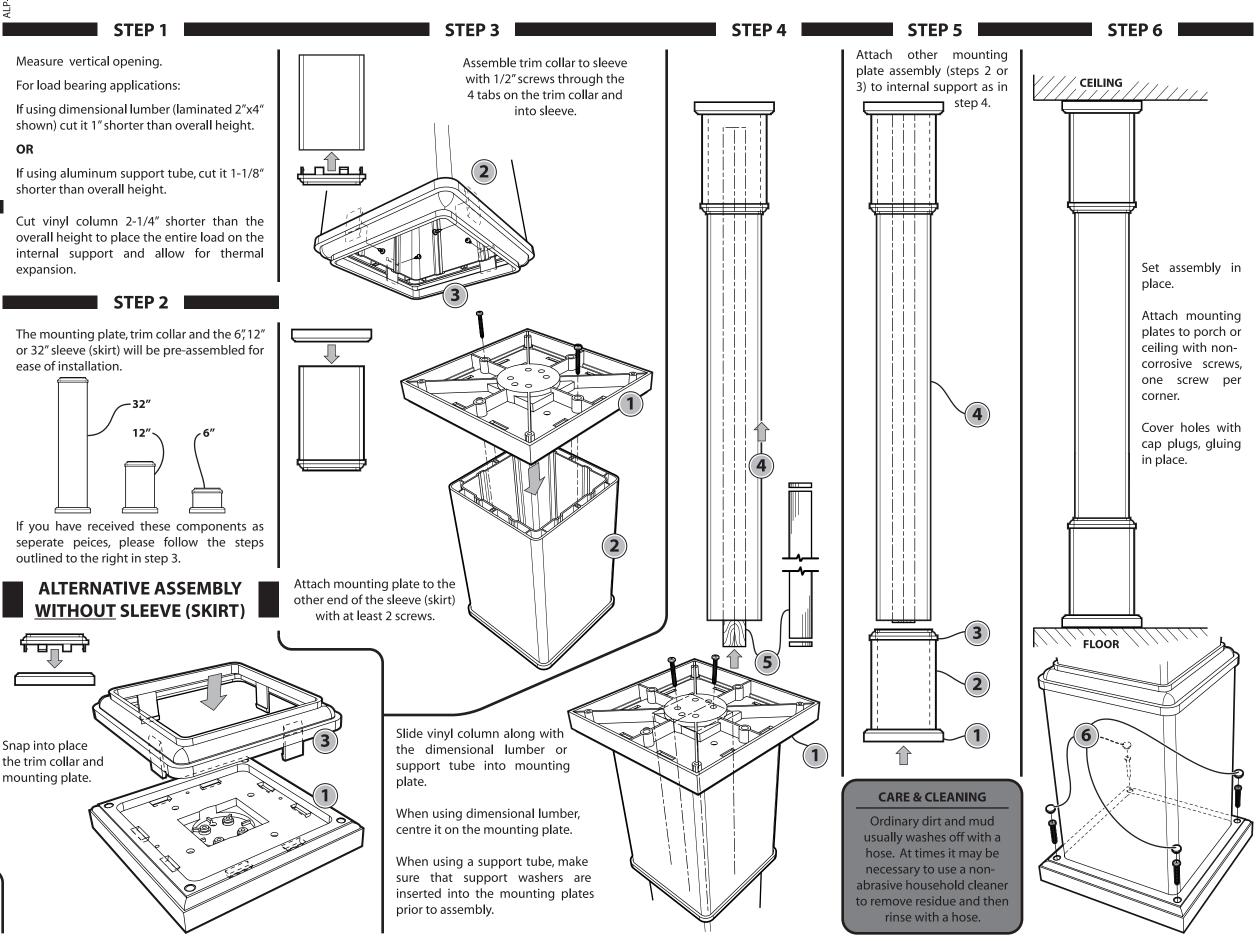

FASTENERS

All appropriate fasteners are to be supplied by installer and be of a non-corrosive quality.

